


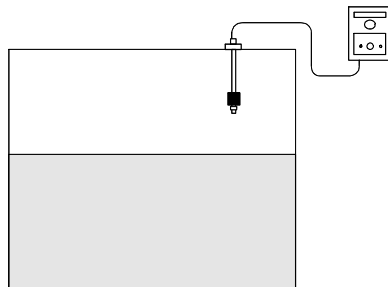

SMARTANK 1

INSTRUCTIONS

- 1) THIS DEVICE IS DESIGNED TO BE INSTALLED IN EXPOSED LOCATIONS, HOWEVER CARE MUST BE TAKEN WHEN REMOVING OR FITTING THE FRONT PANEL NOT TO DAMAGE THE INTEGRAL SEAL ALLOWING WATER INGRESS.
- 2) TO REMOVE THE FRONT PANEL, RELEASE THE FOUR METAL SCREWS LOCATED IN THE FRONT PANEL RECESSES.
- 3) REMOVE THE FOUR KNOCKOUT SECTIONS ON THE REAR HALF OF THE ENCLOSURE AND USE THE FOUR HOLES CREATED AS A TEMPLATE TO MARK THE MOUNTING SURFACE WHICH SHOULD BE FLAT IN ORDER THAT DISTORTION OF THE ENCLOSURE RESULTING IN WATER INGRESS DOES NOT OCCUR.
- 4) MOUNT THE REAR HALF OF THE ENCLOSURE WITH THE CABLE ENTRY GROMMET AT THE BOTTOM.
- 5) HAVING MOUNTED THE SENSOR PROBE IN THE STORAGE TANK TO BE MONITORED, PASS THE SENSOR CABLE THROUGH THE CABLE ENTRY GLAND AND ATTACH TO THE TERMINAL BLOCK (POLARITY IS NOT IMPORTANT).
- 6) CONNECT THE 12V POWER SUPPLY OR INSERT BATTERY, MAKING SURE TO OBSERVE POLARITY, CONNECTING BOTH WILL DAMAGE THE UNIT.
- 7) THE FRONT PANEL MAY NOW BE REFITTED SECURELY ENSURING THAT NO DAMAGE OCCURS TO THE INTEGRAL SEAL.
- 8) SWITCH TO THE TEST POSITION AND HOLD. THE SOUNDER SHOULD OPERATE AND THE RED AND GREEN LEDS SHOULD ILLUMINATE.
- 9) SWITCH TO THE ON POSITION BEFORE COMMENCING TANK FILLING OPERATIONS.




Metcraft Ltd
Harwood Industrial Estate
Littlehampton
West Sussex
BN17 7BB



SMARTANK 1

INSTRUCTIONS

- 1) THIS DEVICE IS DESIGNED TO BE INSTALLED IN EXPOSED LOCATIONS, HOWEVER CARE MUST BE TAKEN WHEN REMOVING OR FITTING THE FRONT PANEL NOT TO DAMAGE THE INTEGRAL SEAL ALLOWING WATER INGRESS.
- 2) TO REMOVE THE FRONT PANEL, RELEASE THE FOUR METAL SCREWS LOCATED IN THE FRONT PANEL RECESSES.
- 3) REMOVE THE FOUR KNOCKOUT SECTIONS ON THE REAR HALF OF THE ENCLOSURE AND USE THE FOUR HOLES CREATED AS A TEMPLATE TO MARK THE MOUNTING SURFACE WHICH SHOULD BE FLAT IN ORDER THAT DISTORTION OF THE ENCLOSURE RESULTING IN WATER INGRESS DOES NOT OCCUR.
- 4) MOUNT THE REAR HALF OF THE ENCLOSURE WITH THE CABLE ENTRY GROMMET AT THE BOTTOM.
- 5) HAVING MOUNTED THE SENSOR PROBE IN THE STORAGE TANK TO BE MONITORED, PASS THE SENSOR CABLE THROUGH THE CABLE ENTRY GLAND AND ATTACH TO THE TERMINAL BLOCK (POLARITY IS NOT IMPORTANT).
- 6) CONNECT THE 12V POWER SUPPLY OR INSERT BATTERY, MAKING SURE TO OBSERVE POLARITY, CONNECTING BOTH WILL DAMAGE THE UNIT.
- 7) THE FRONT PANEL MAY NOW BE REFITTED SECURELY ENSURING THAT NO DAMAGE OCCURS TO THE INTEGRAL SEAL.
- 8) SWITCH TO THE TEST POSITION AND HOLD. THE SOUNDER SHOULD OPERATE AND THE RED AND GREEN LEDS SHOULD ILLUMINATE.
- 9) SWITCH TO THE ON POSITION BEFORE COMMENCING TANK FILLING OPERATIONS.

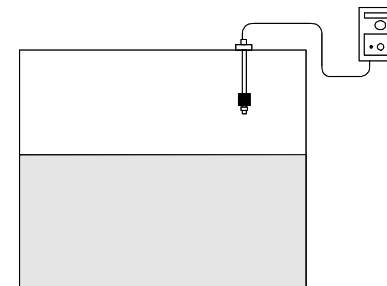

Metcraft Ltd
Harwood Industrial Estate
Littlehampton
West Sussex
BN17 7BB

